


Ti Link (Ti Base) vs. Custom Abmt / Screw Retained vs. Cement Retained vs. SCRP

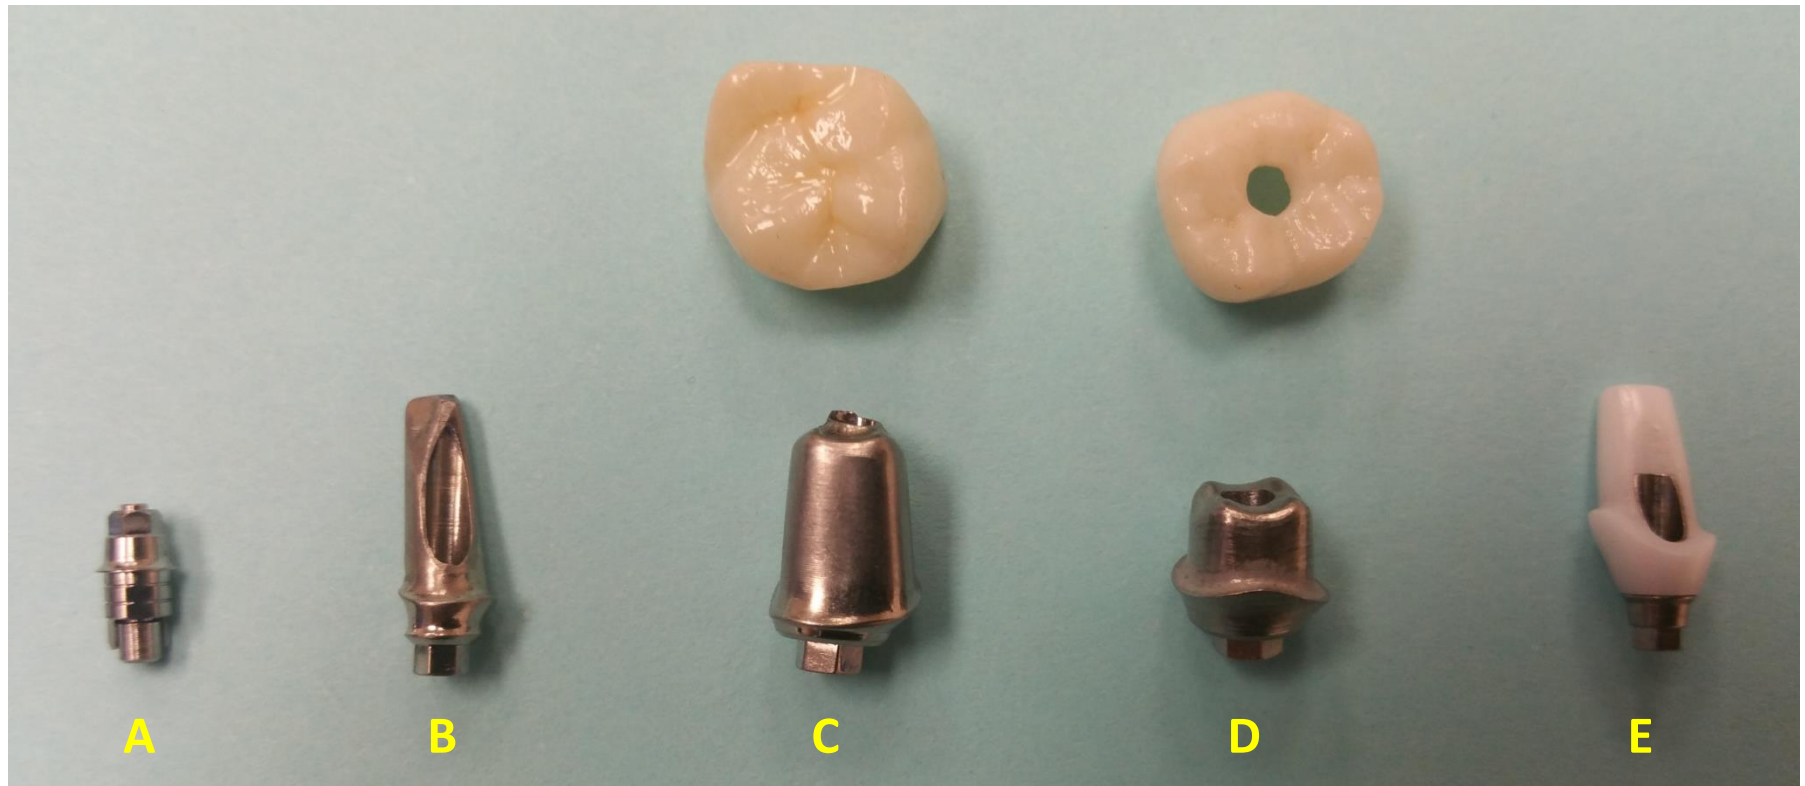

A : Ti Link (Ti Base) / Screw Retained - for BruxZir, e.max

B : Custom Abutment (Ti)

C : Custom Abutment (Ti) & Crown / Cement Retained - for PFM, BruxZir

D : Custom Abutment (Ti) & Crown / * SCRP ----- for PFM, BruxZir

*** SCRP (Screw & Cement Retained Prosthesis) :**

Lab makes screw access hole. And Doctors cement Abutment & Crown at the chair side
Eventually, it will be **Screw Retained**

E : Hybrid Abutment (Ti Link & Zirconia Custom Abutment) – for PFM, BruxZir